



Premium 70mm & 80mm


Frames

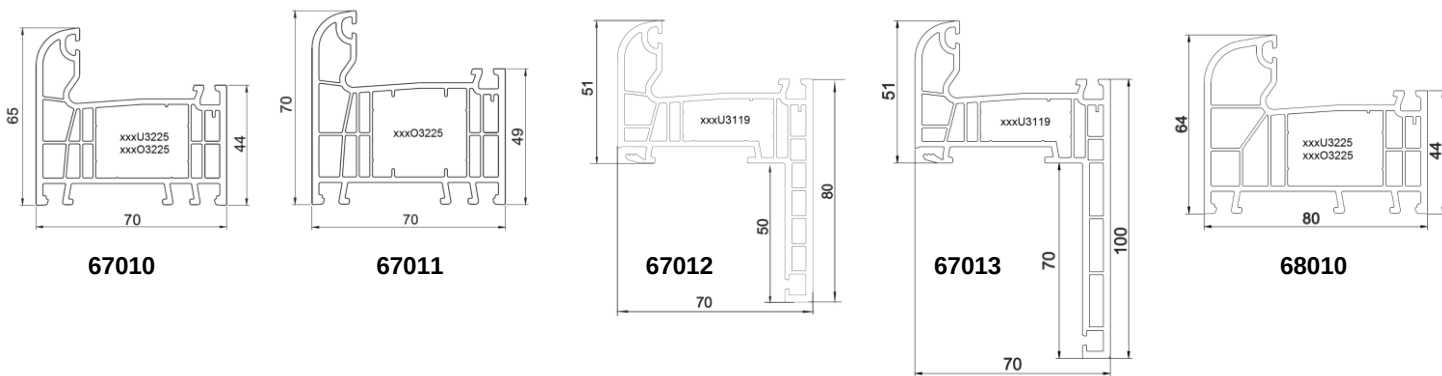


Glazing beads

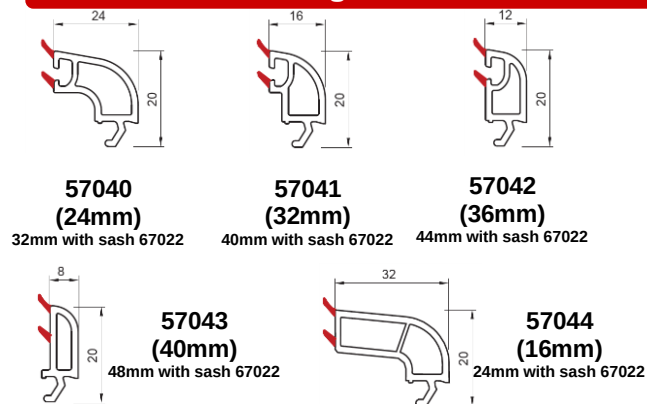



Window Sashes

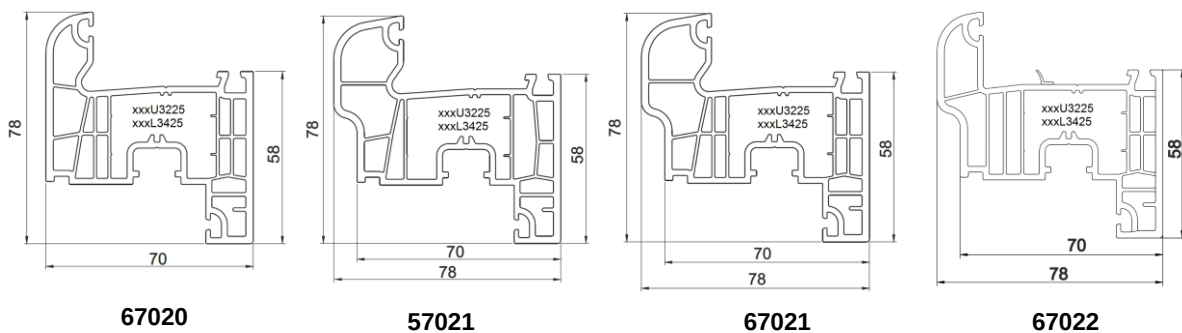


Other Main Profiles

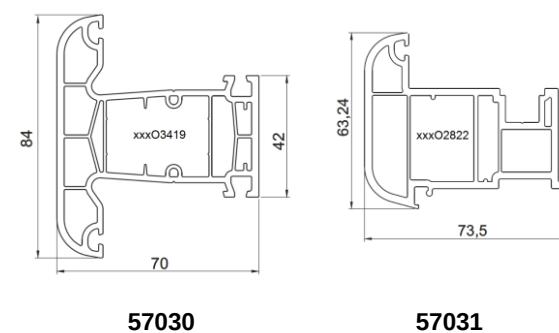


Door Sashes






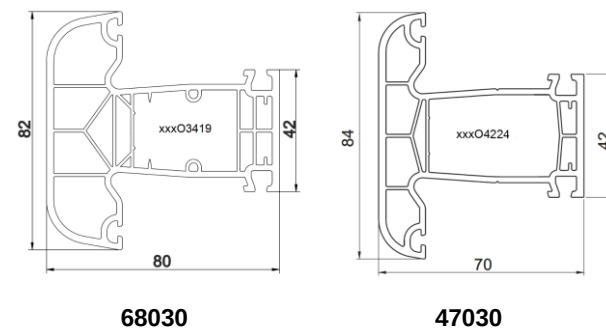
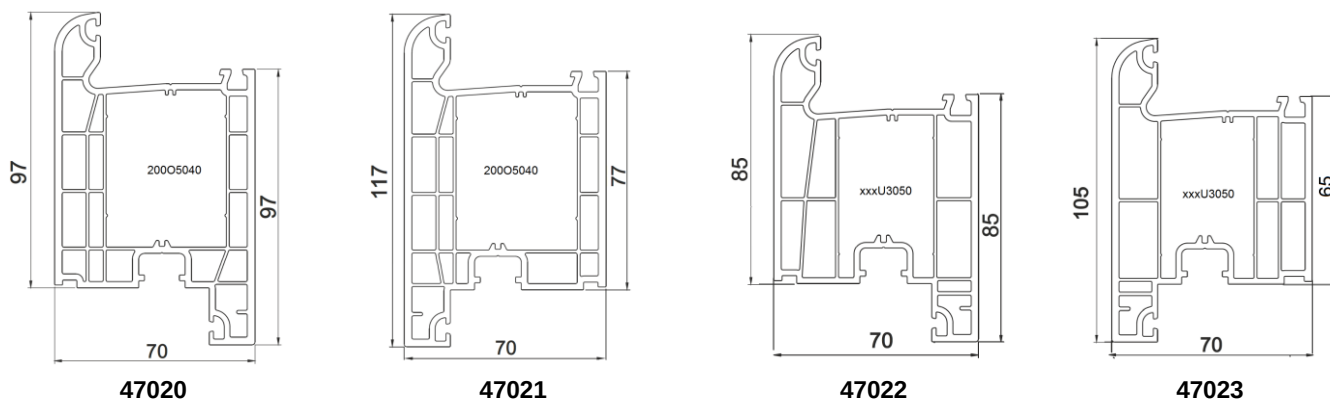


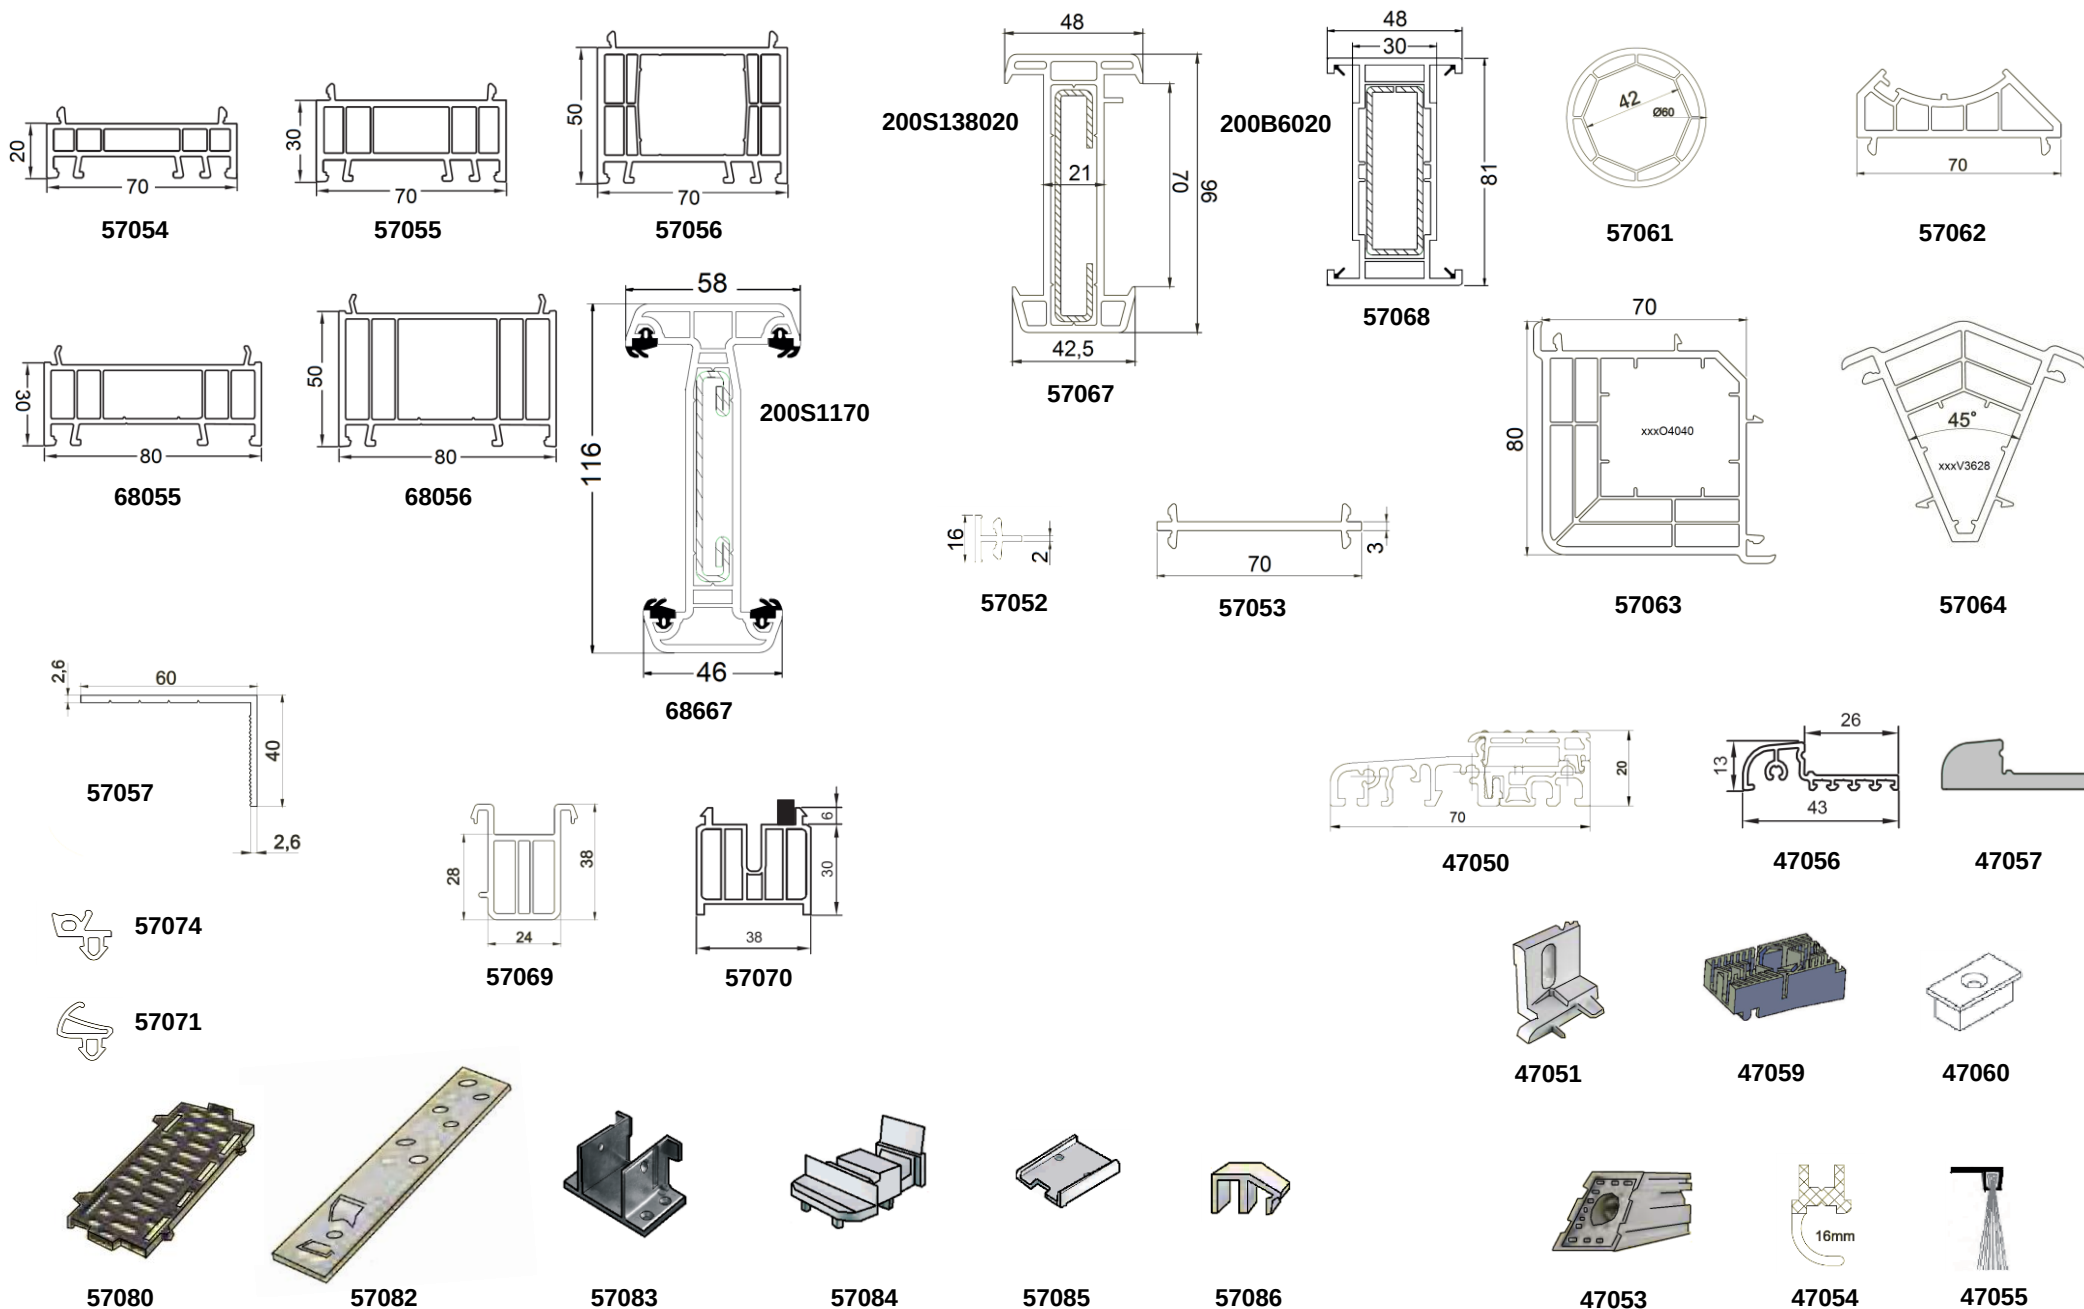










Reinforcement








[illegible]

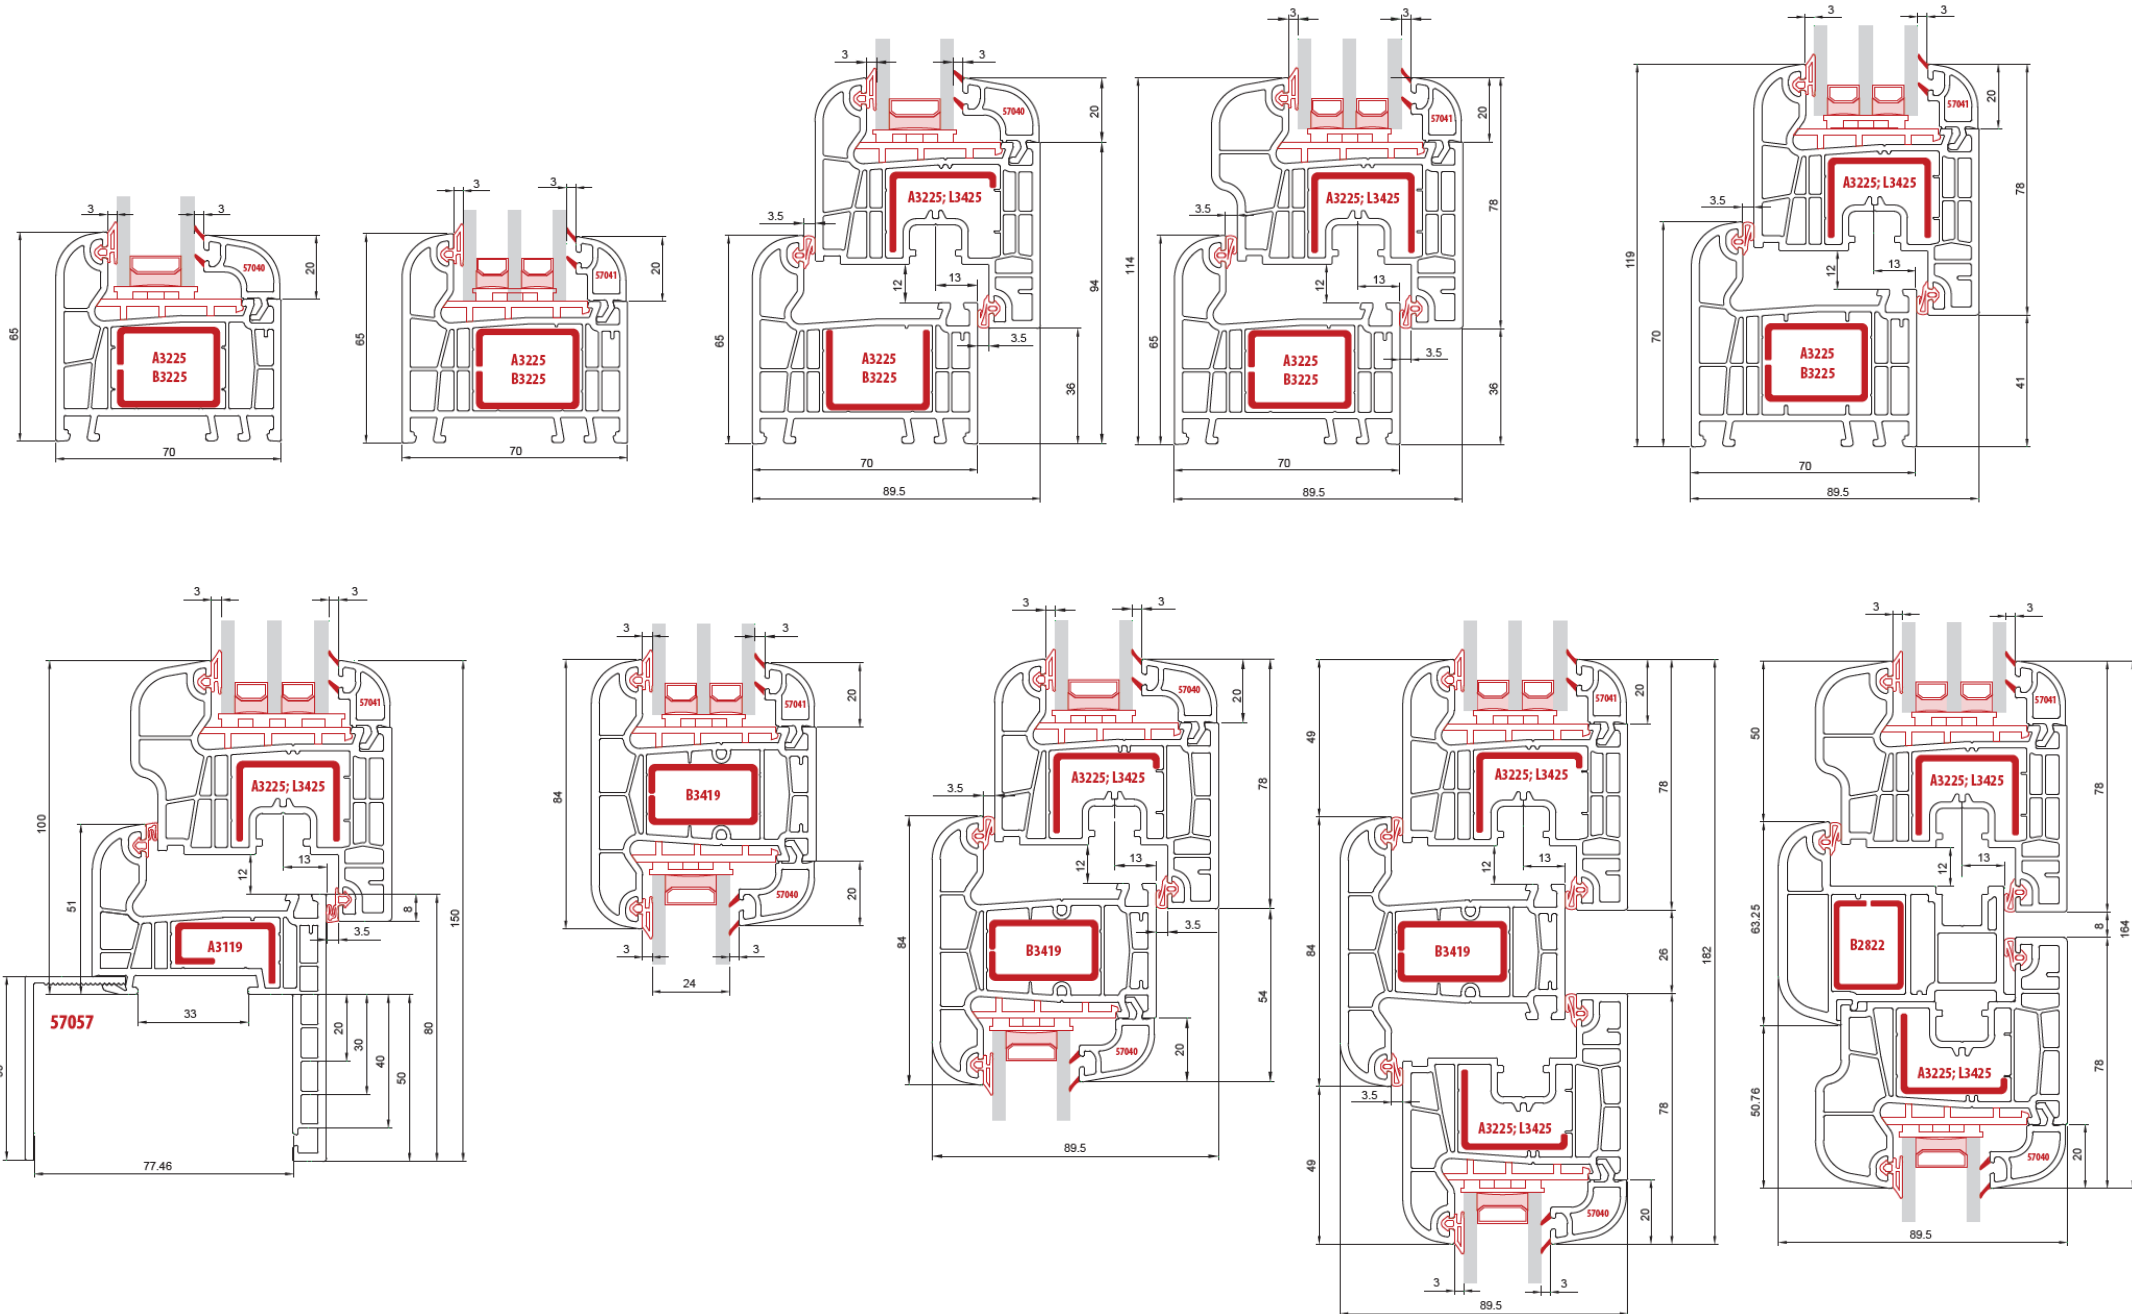

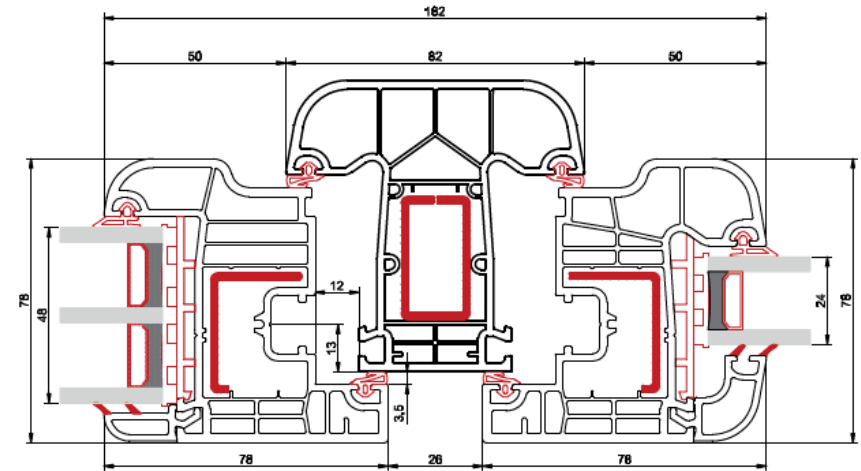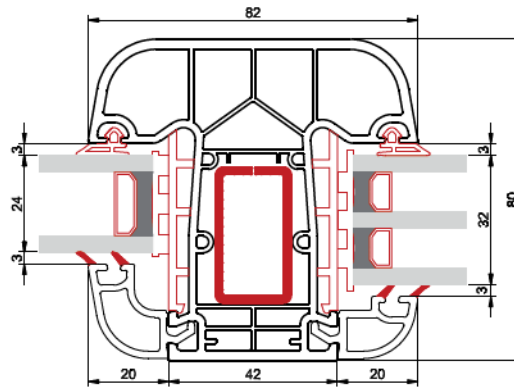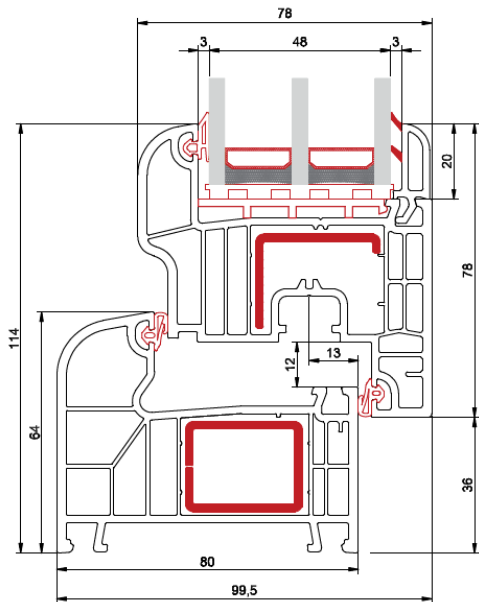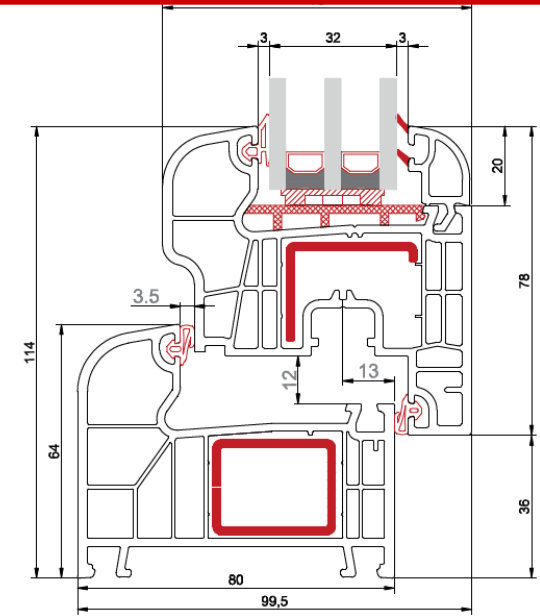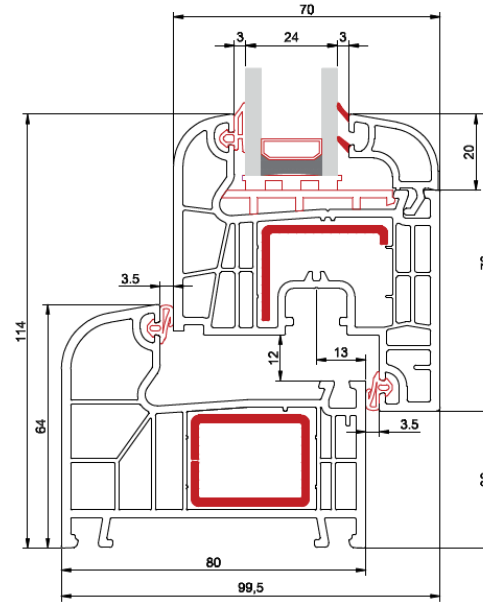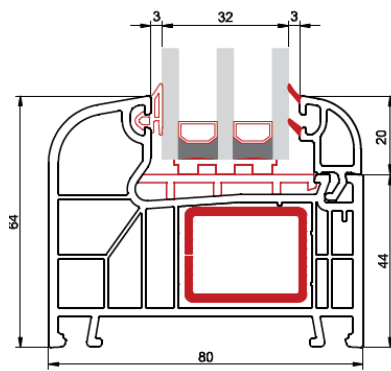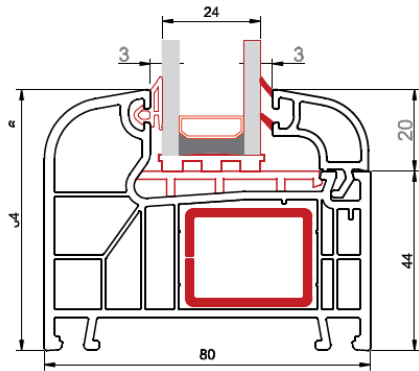

Cross Sections of Doors

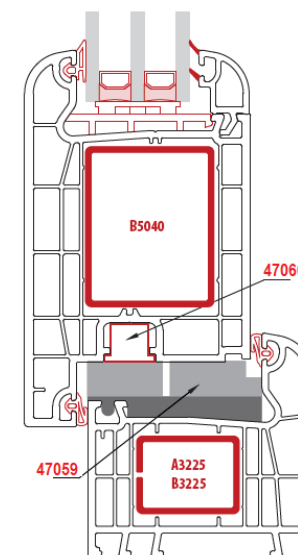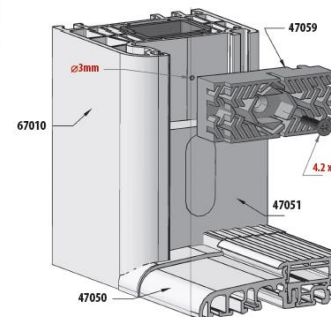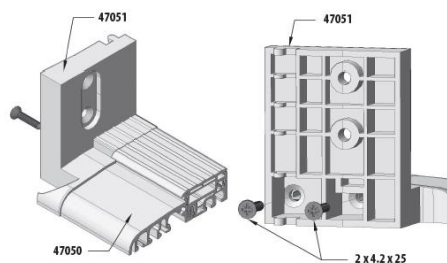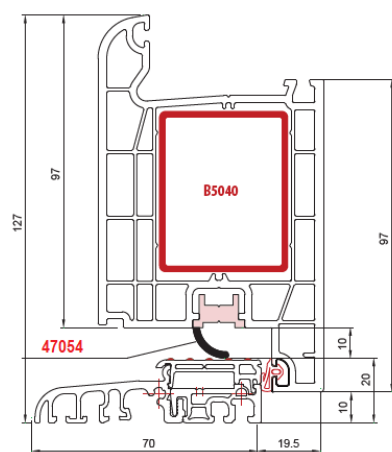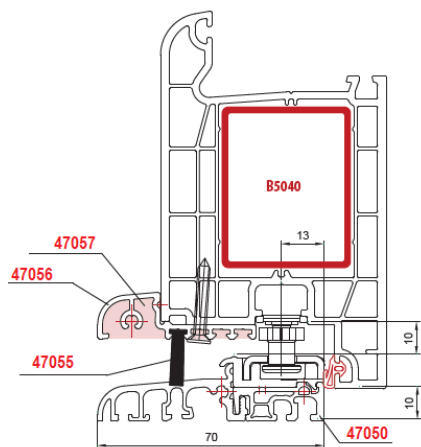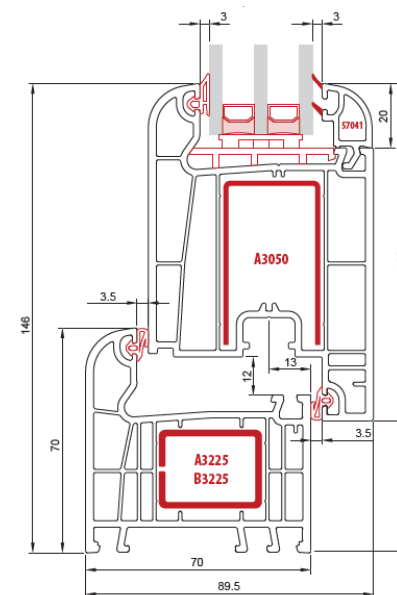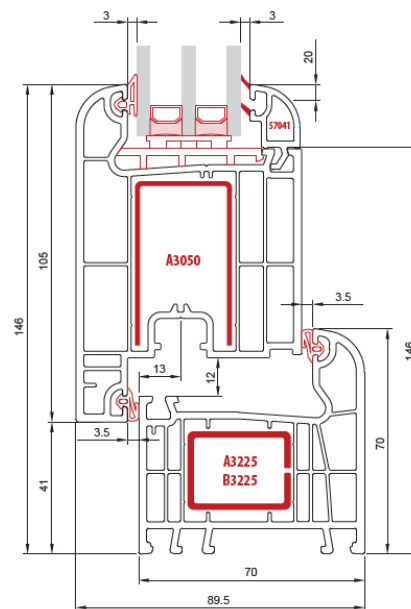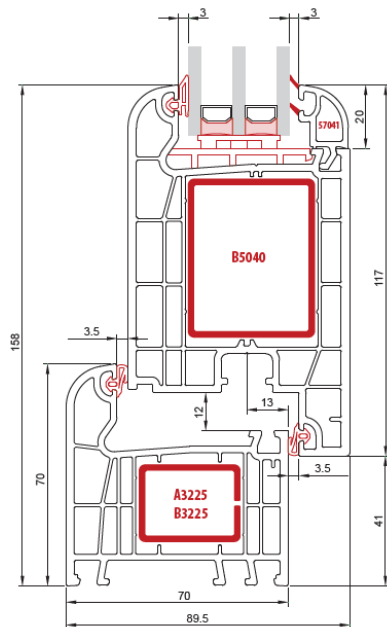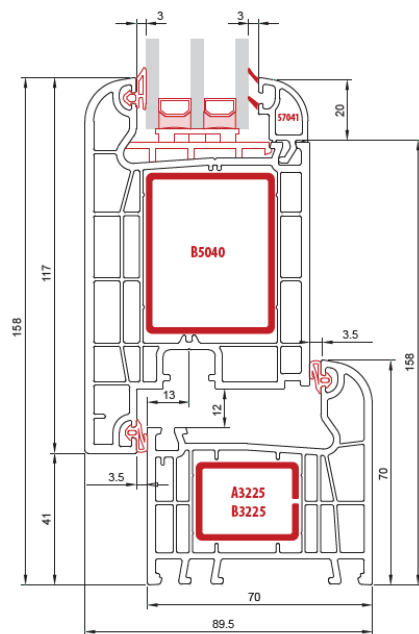

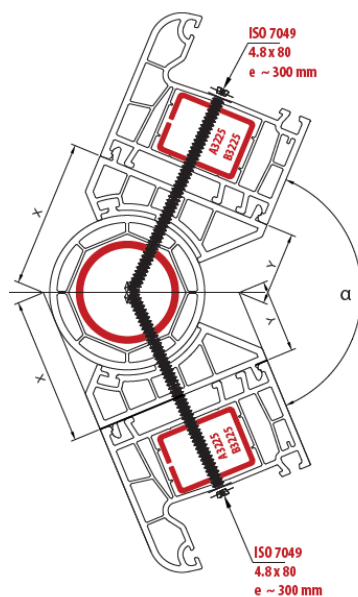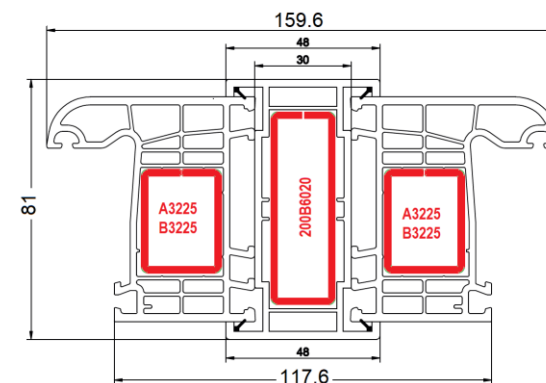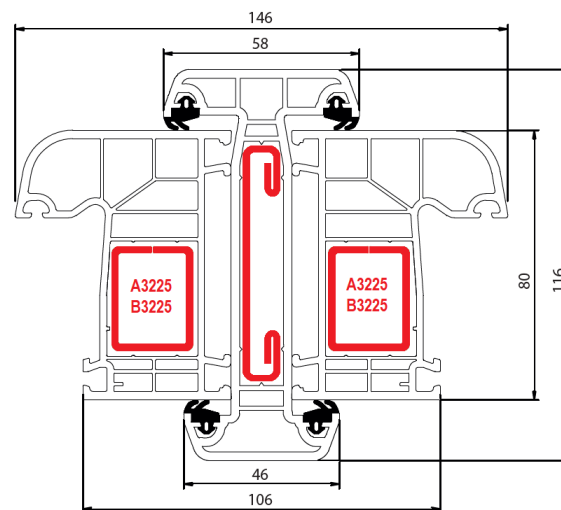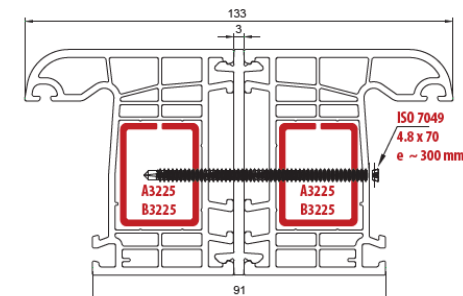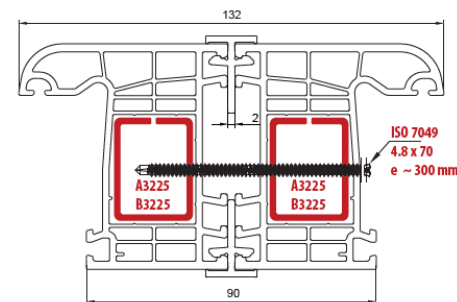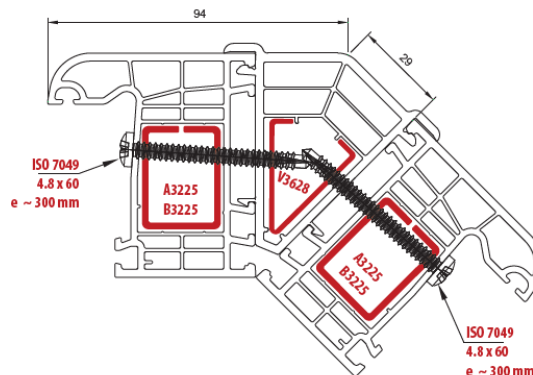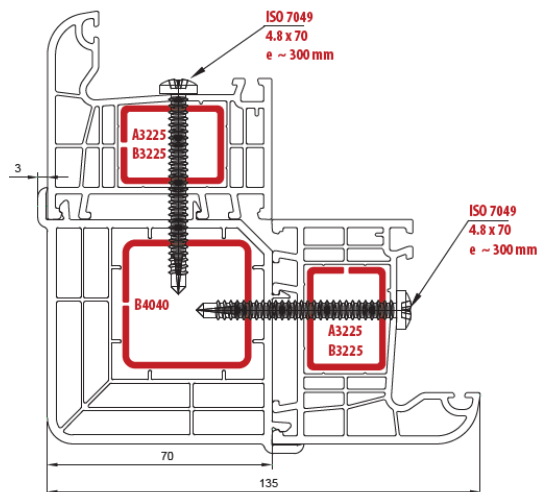

$$X = 45 + \frac{30}{\tan(\alpha/2)}$$

$$Y = 45 - \frac{30}{\tan(\alpha/2)}$$

Zakładany kąt	Wymiary zewnętrzne	
α	X (mm)	Y (mm)
90	75,0	15,0
95	72,5	17,5
100	70,2	19,8
105	68,0	22,0
110	66,0	24,0
115	64,1	25,9
120	62,3	27,7
125	60,6	29,4
130	59,0	31,0
135	57,4	32,6
140	55,9	34,1
145	54,5	35,5
150	53,0	37,0
155	51,7	38,3
160	50,3	39,7
165	48,9	41,1
170	47,6	42,4
175	46,3	43,7
180	45,0	45,0

